
1999-2004 Jeep Grand Cherokee Ball Joint Replacement

A video tutorial on how to change the ball joints on your Jeep Cherokee XJ and ZJ, Wrangler YJ, TJ and LJ, and Comanche MJ years 1997-2001.

Written By: eCuration

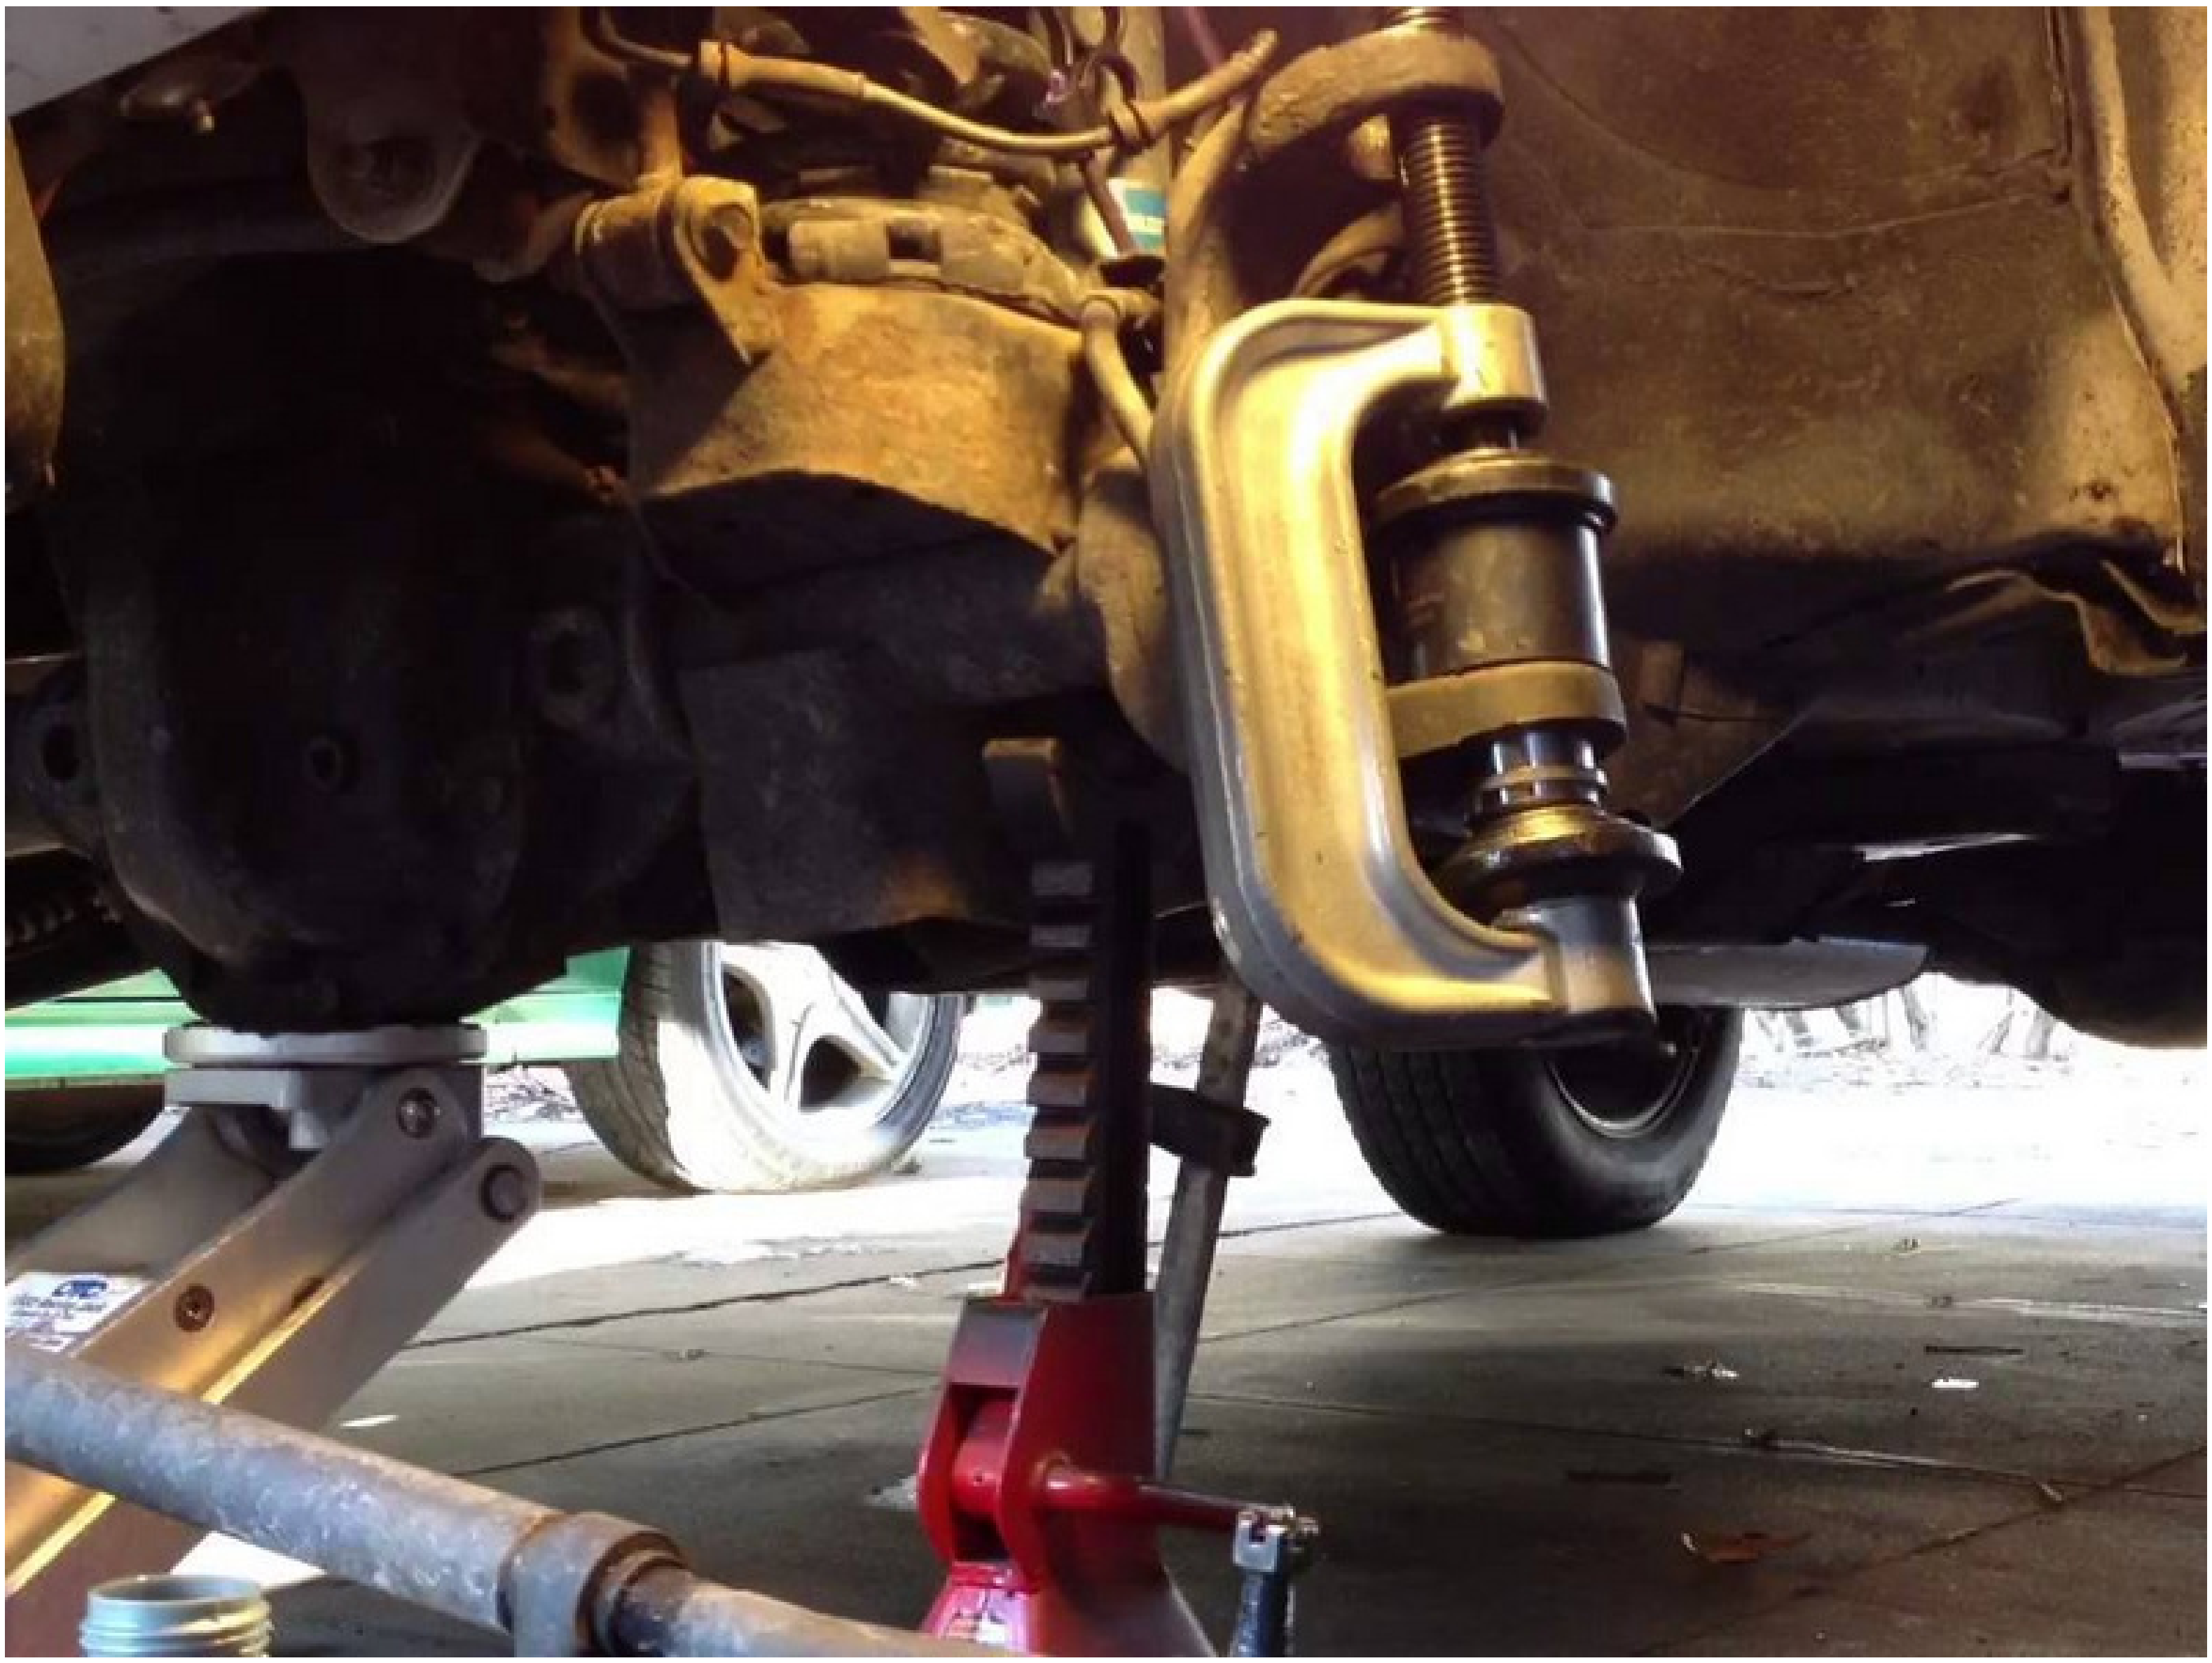

INTRODUCTION

A complete and detailed guide to replacing your Jeep's ball joints.

Applies to Jeep Cherokee (XJ) 84-01, Jeep Grand Cherokee (ZJ) 93-98, Jeep Wrangler (YJ, TJ and LJ) 87-06, and Jeep Comanche (MJ) 86-92.

- You may want to replace all four ball joints at the same time.
- Putting the ball joints in the freezer for a day or two will cause the metal to shrink, making installation easier.

[video: https://www.youtube.com/watch?v=3ol3TPHzvHk]

TOOLS:

- Hydraulic Floor Jack (1)
- Jack Stand (1)
- Ball Joint Service Tool Kit (1)
- 3/8" Drive Ratchet (1)
- 13mm Wrench (1)
- 1/2" Drive Breaker Bar (1)
- 8" Needle Nose Plier (1)
- Pickle Fork (1)
- Mallet (1)
- Torque Wrench (1)
- Grease Gun (1)

PARTS:

- Upper Ball Joint Jeep Grand Cherokee WJ (2)
- Ball Joint Lower Jeep Grand Cherokee WJ (2)

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-13 10:43:04 PM.